


1 3 BED B UNIT PLAN - PRE ADAPTABLE
SCALE 1 : 50

PRE TO POST ADAPTATION NOTES

1. PROVIDE POST ADAPTATION DRAINAGE CONNECTION POINTS AT TIME OF CONSTRUCTION. FULLY CAP PRVISIONAL DRAINAGE POINT TO AUSTRALIAN STANDARD.
2. ENTRY AND VISITABLE BATHROOM REMAIN UNTOUCHED.
3. PROVIDE PROVISION FOR POWER FOR POST ADAPTATION WALL OVEN.
4. PROVIDE PROVISION IN WALL STRUCTURE FOR POST ADAPTATION GRAB RAILS NEAR SHOWER AND WATER CLOSET PAN.
5. REMOVE ONE ROBE TO CREATE CIRCULATION.
6. MOVE ISLAND TO ACHIEVE 1550MM BETWEEN BENCH AND ISLAND.
7. REMOVE LAUNDRY BI-FOLD DOORS, MOVE THE WALL AND LAUNDRY JOINERY TO ACHIEVE TURNING CLEARANCE.
8. PROVIDE FLUSH SILLS FOR BOTH DOORS ENTRY AND BALCONY.
9. REPLACE FIXTURES TO ENSUITE TO AS 4299 COMPLIANT FIXTURES. REMOVE BATHTUB AND INSTALL BASIN.

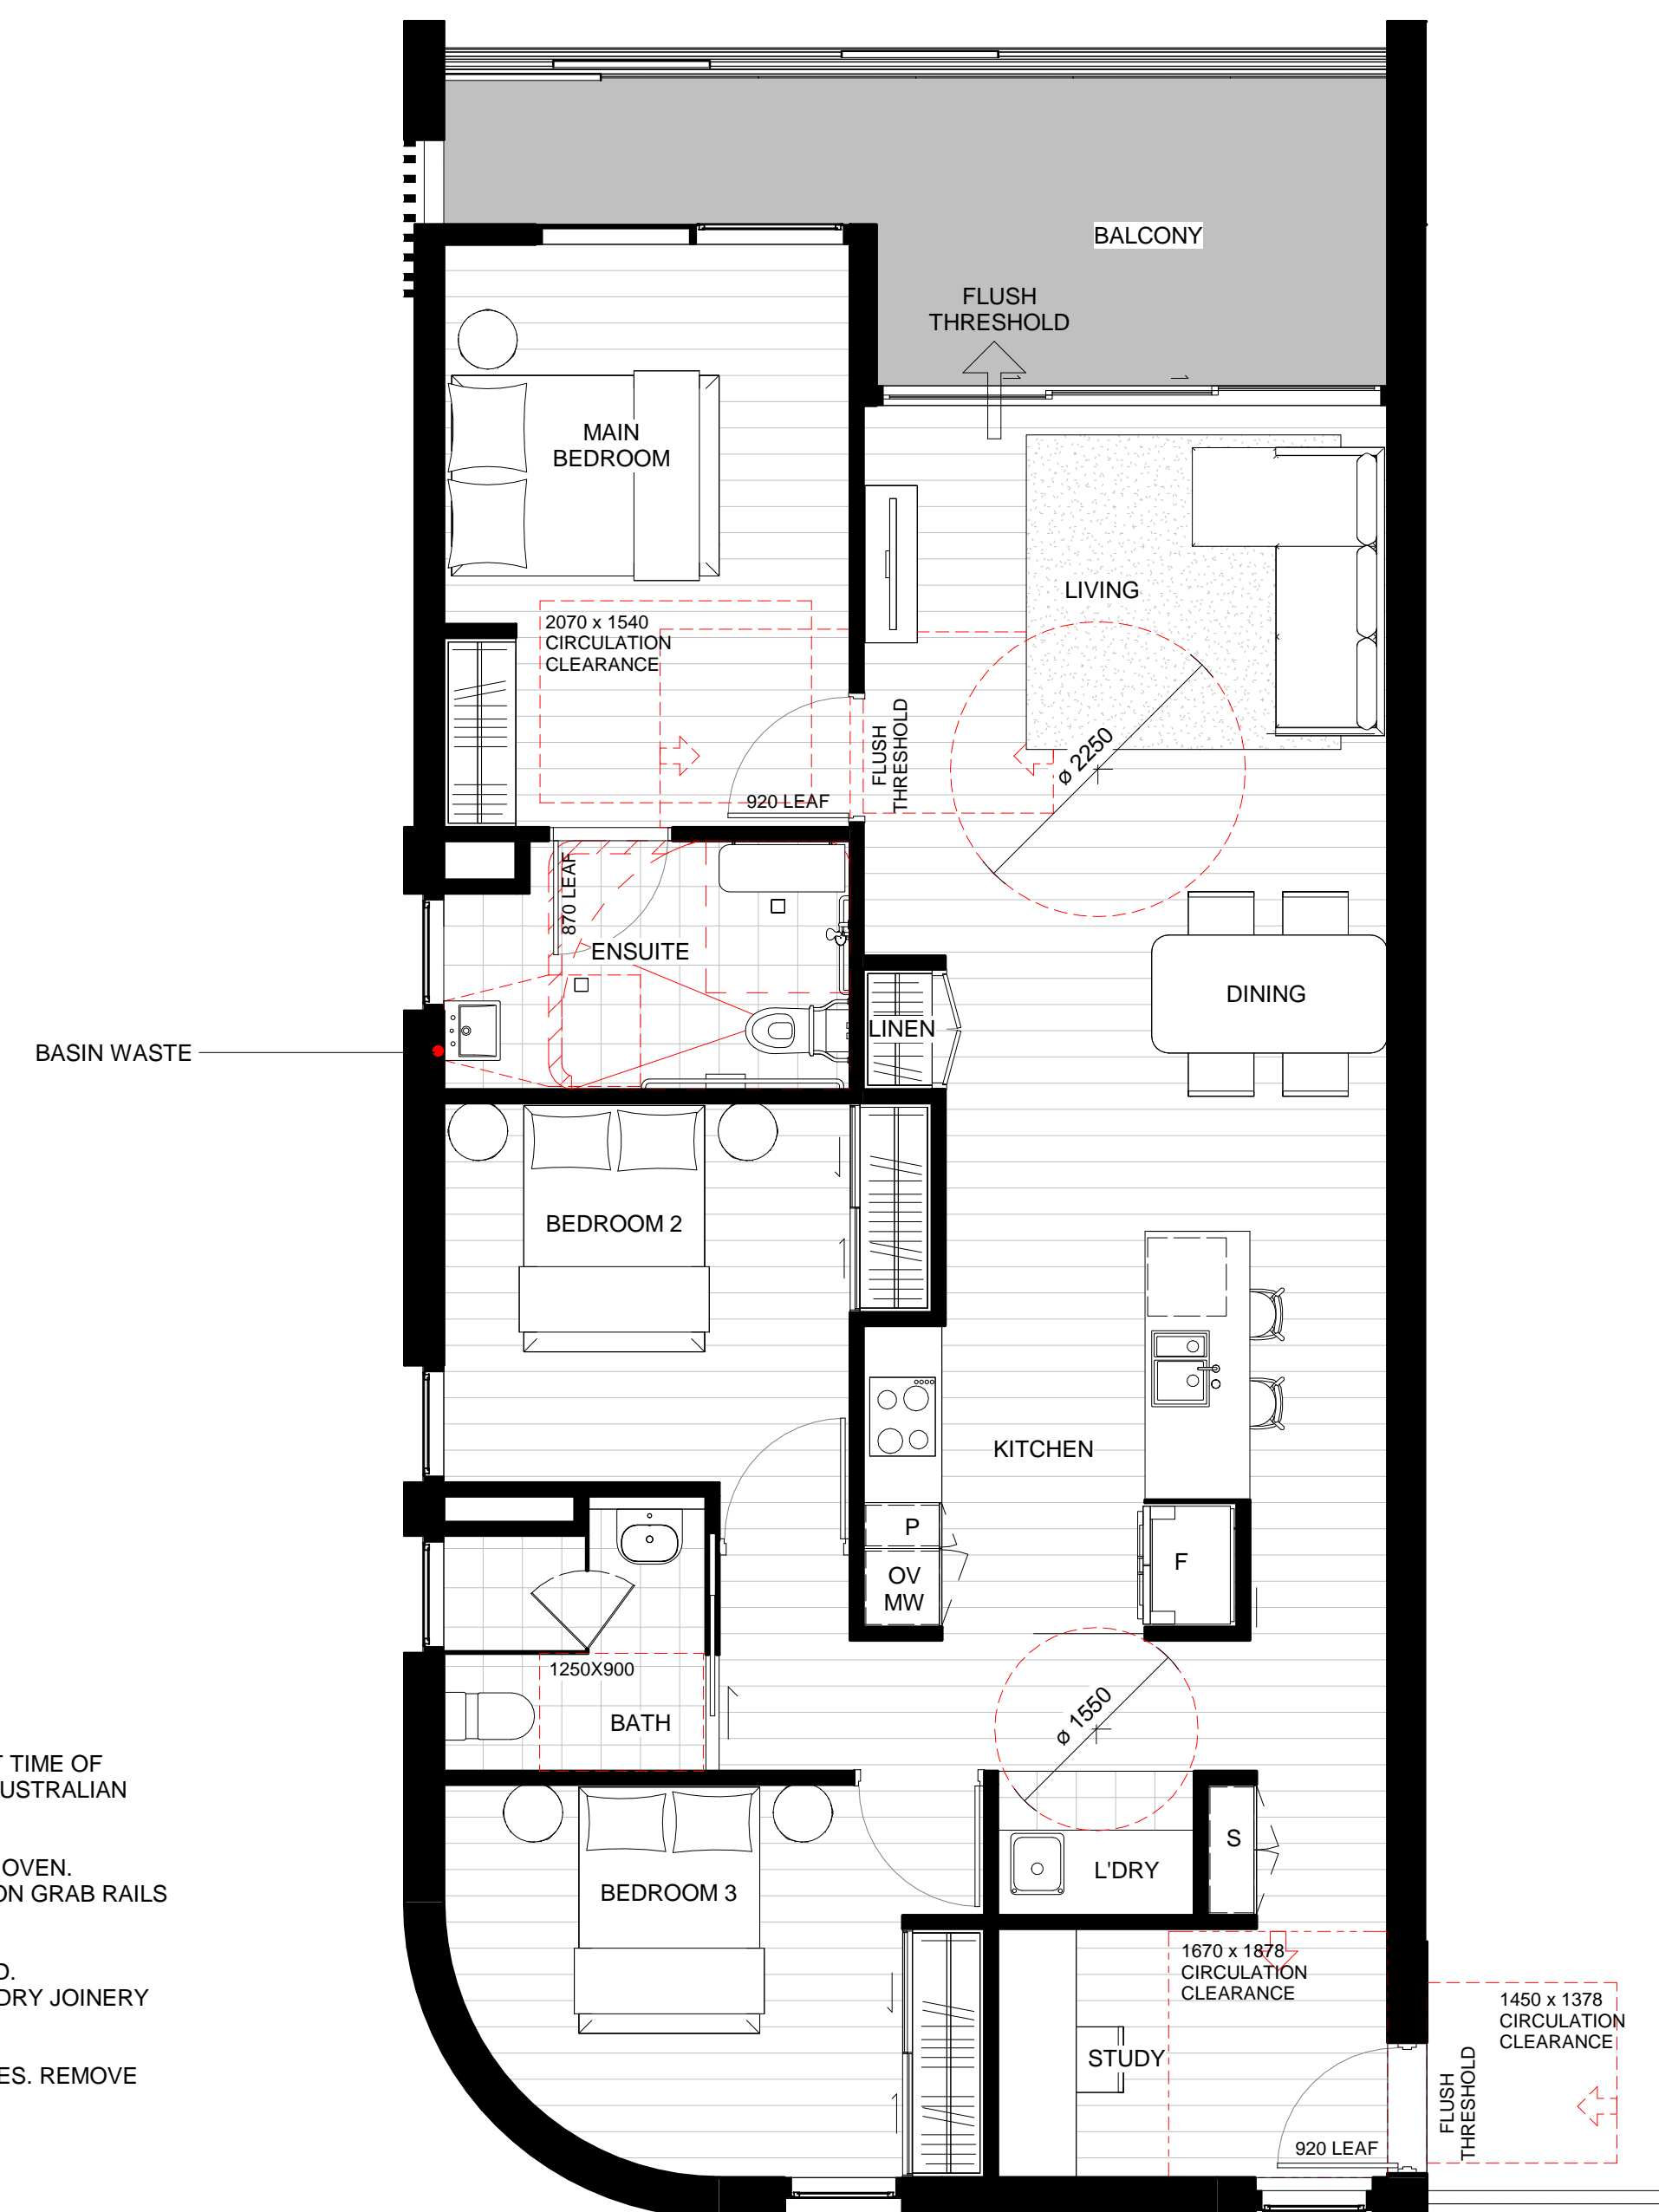

2 3 BED B UNIT PLAN - POST ADAPTABLE
SCALE 1 : 50