


NOTES:

1. WHEN PLANTING, APPLY FERTILIZER, ENSURING IT'S AT LEAST 100mm AWAY FROM THE STEM OR TRUNK. USE A SLOW-RELEASE FERTILIZER SUITABLE FOR THE PLANTS, THEN MULCH.


01 TYP. GARDEN BED AT GRADE
800 / DETAIL SECTION - 1:10 @ A1

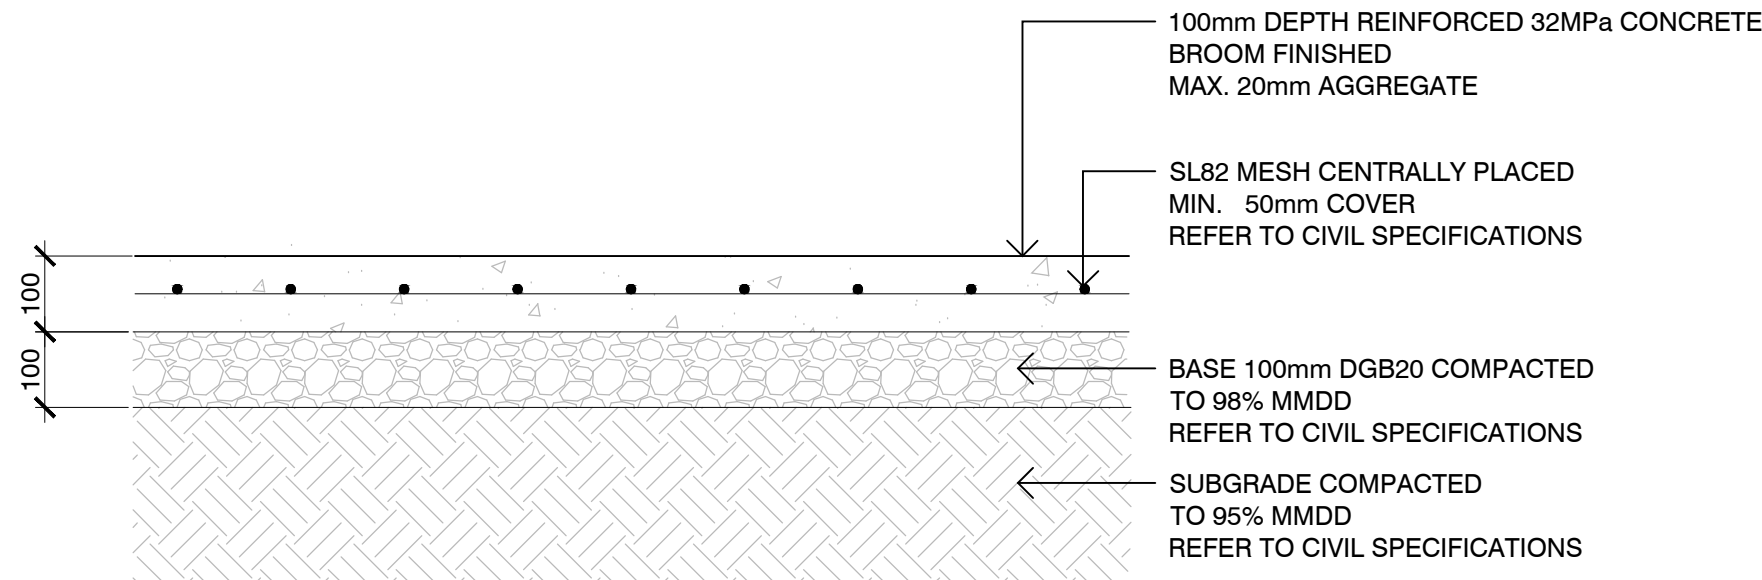

NOTES:

1. CIVIL DOCUMENTATION TAKES PRECEDENCE OVER LANDSCAPE FOR STRUCTURAL DOCUMENTATION
2. REFER TO CIVIL DOCUMENTATION FOR CONTROL JOINTS


02 IN SITU CONCRETE - PEDESTRIAN
800 / DETAIL SECTION - 1:10 @ A1

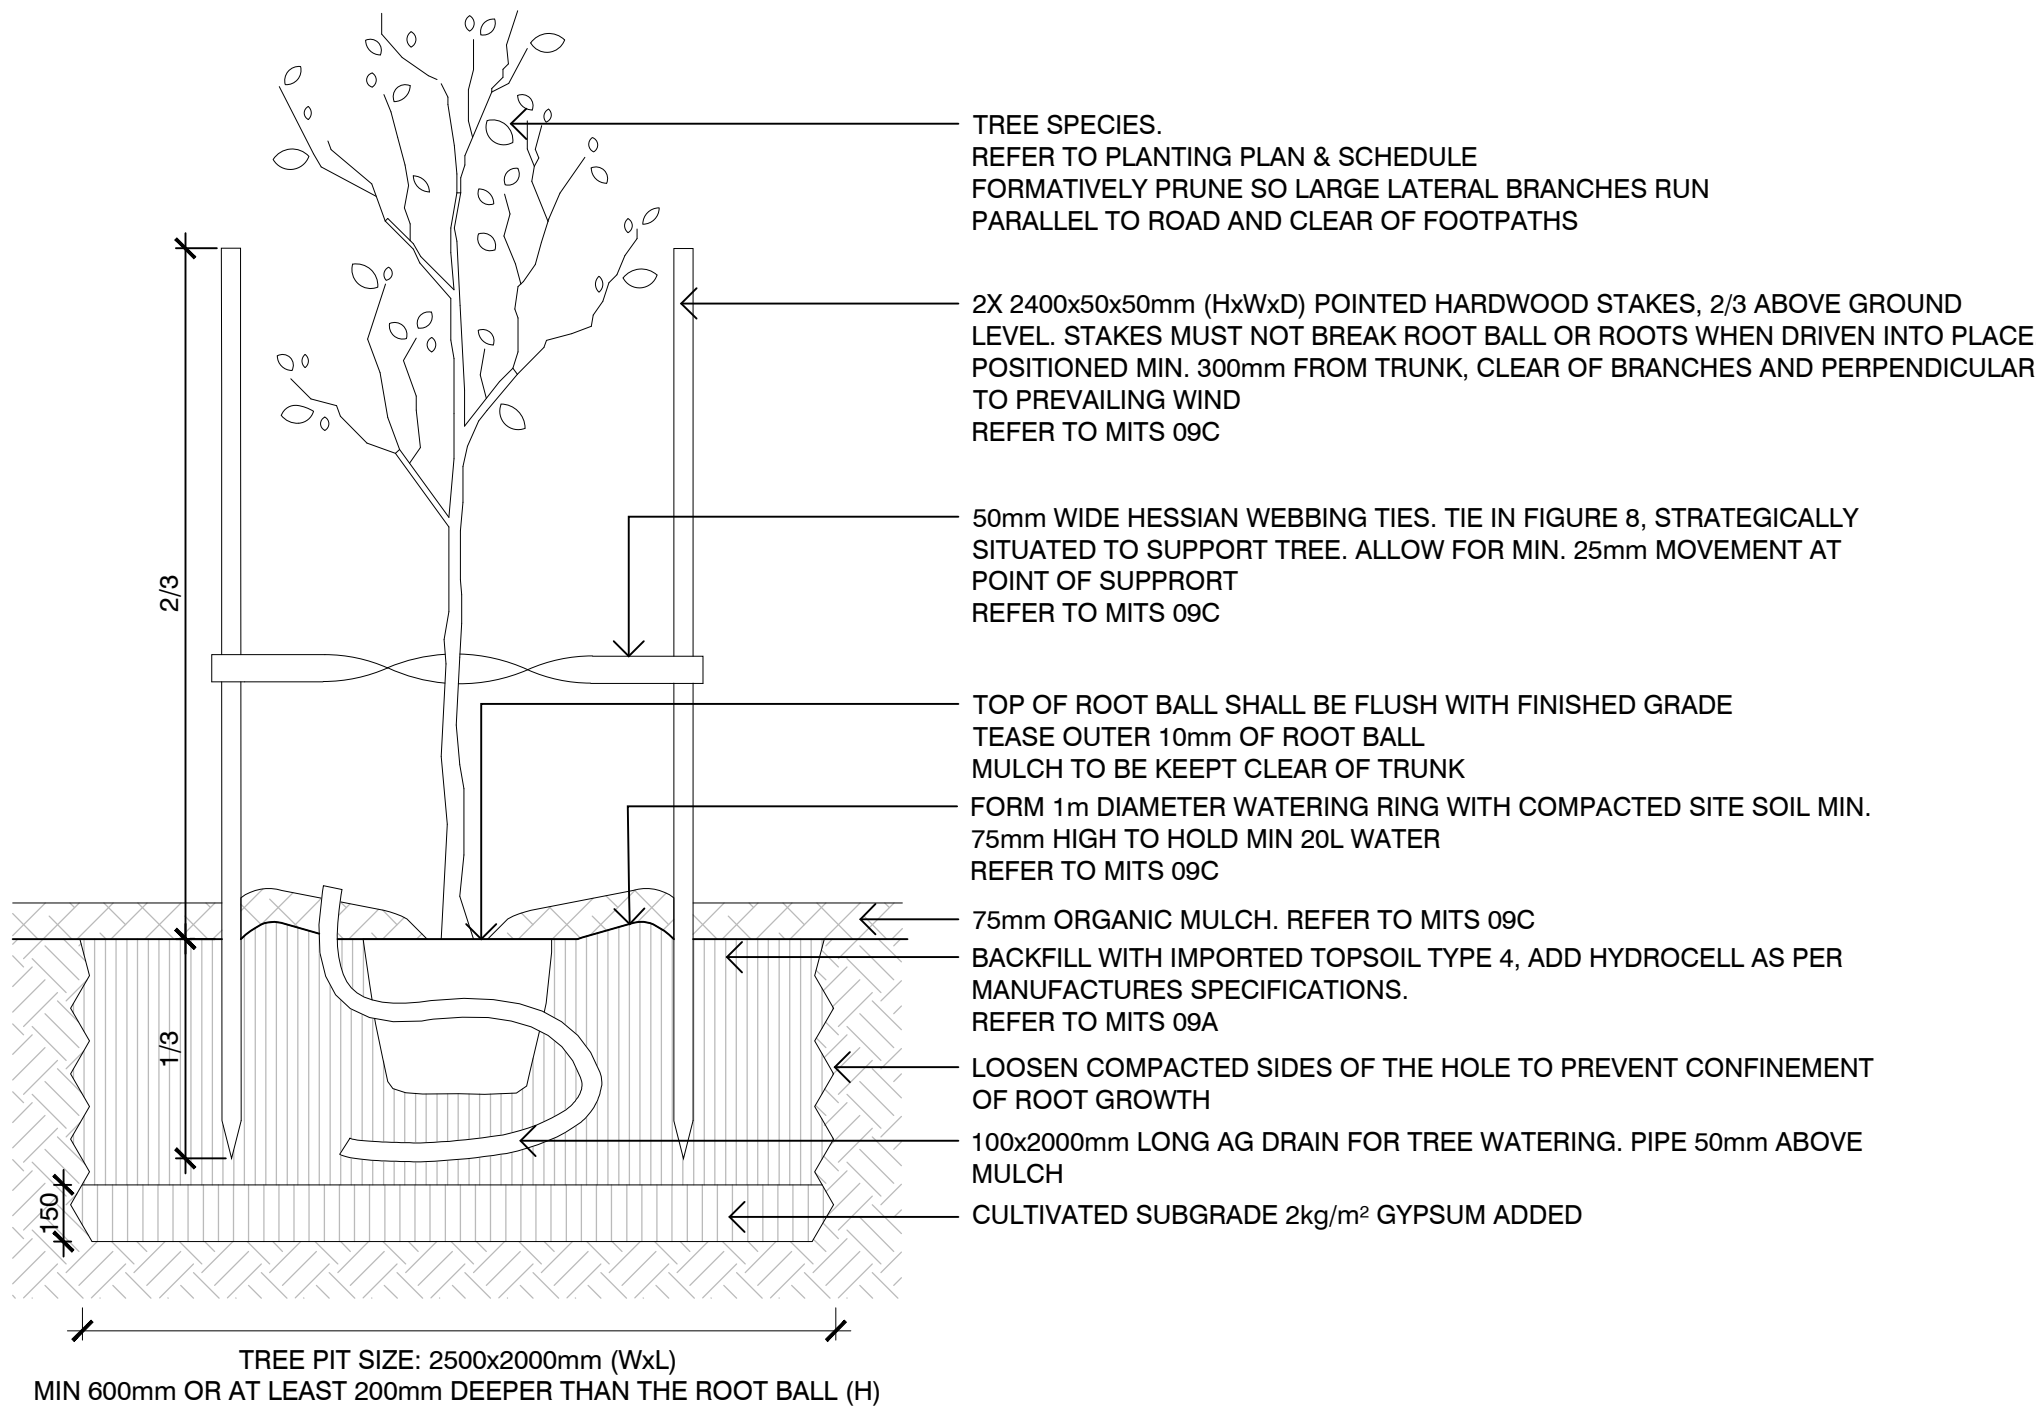

NOTE:

1. INSTALL ROOT BARRIER WHEN INDICATED IN LANDSCAPE DRAWINGS.
2. WHEN PLANTING, APPLY FERTILIZER, ENSURING IT'S AT LEAST 100mm AWAY FROM THE STEM OR TRUNK. USE A SLOW-RELEASE FERTILIZER SUITABLE FOR THE PLANTS, THEN MULCH.
3. LIGHTLY COMPACT SOIL UNDER TREE TO AVOID TREE SUBSIDING.
4. KEEP ROOTS MOIST WHEN PLANTING, DO NOT LET ROOTS DRY OUT.

03 TREE PLANTING - IN GARDEN WITHIN VERGE
800 / DETAIL SECTION - 1:20 @ A1

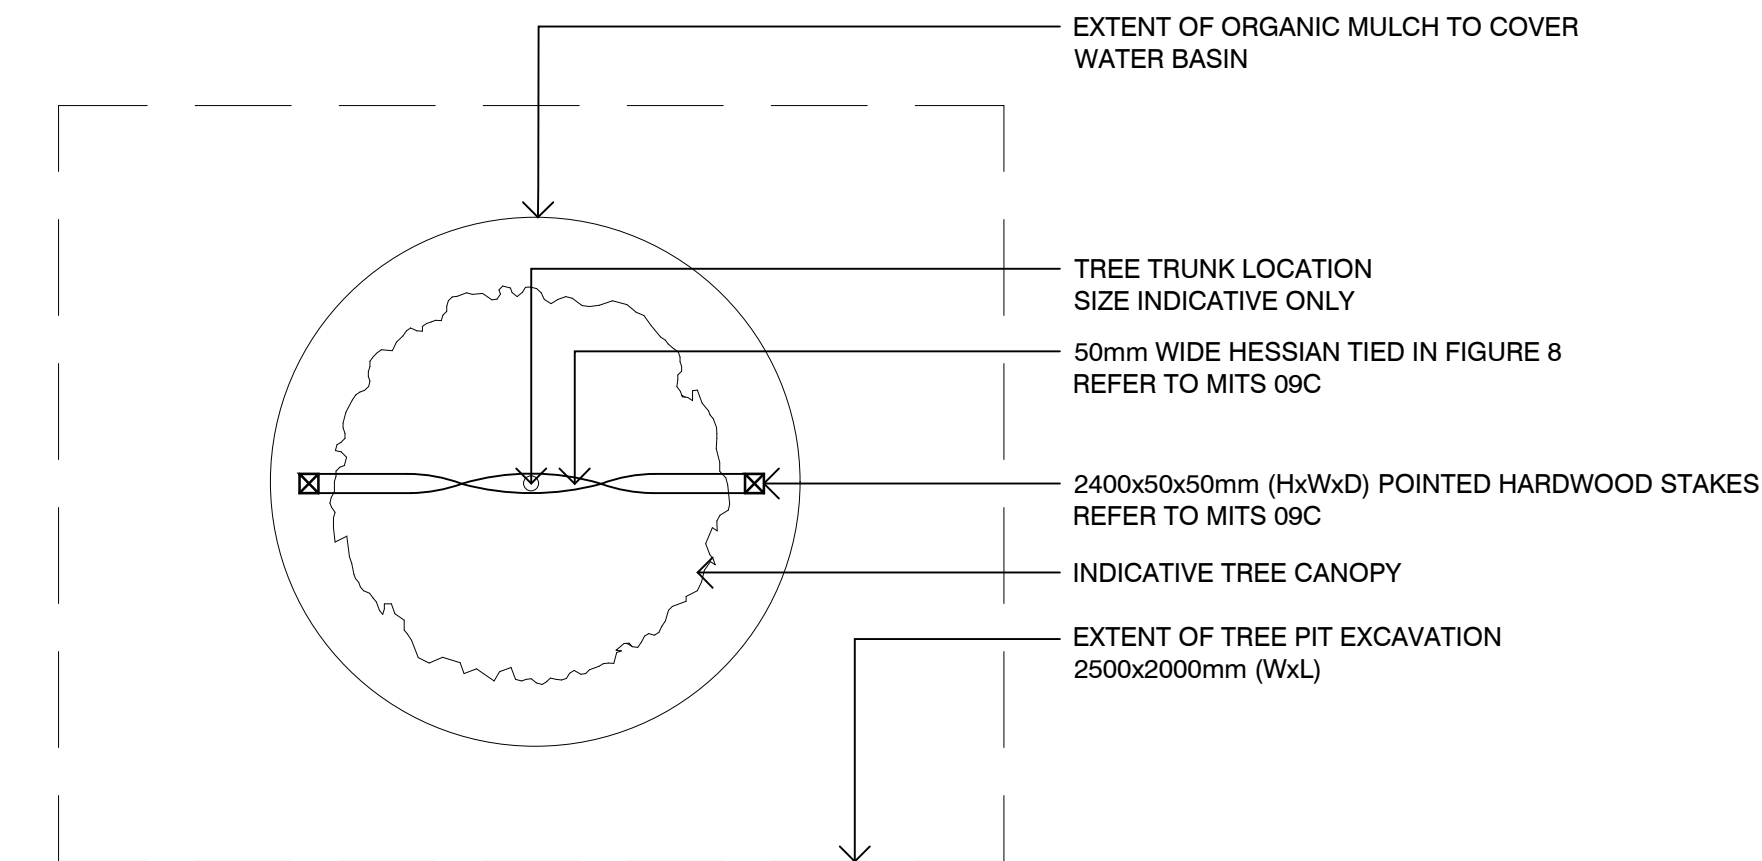

04 TREE STAKES AND HESSIAN TIES
800 / DETAIL SECTION - 1:20 @ A1